



# Quick Start Guide

## Digital to Analog Adapter



**Evolution Digital** - Ideas to Solutions for a Digital World

# Digital Upgrade MADE EASY

## What's Included?



(DTA)  
Digital to Analog Adapter



Universal Remote  
Batteries x2



IR Extender  
Remote Eye Cable



Coax Cable



Power Cord



Adhesive Velcro

## Safety Information

Use only as instructed. Make sure to place the DTA in a well ventilated area away from any heat source. To avoid electrical shock: Do not open the DTA cover. Make sure the power to your TV/VCR is off when connecting the cables. Do not use the power cord if it becomes damaged.

 
The DTA is provided with a DC 5V IN AC power cord. It has been designed to meet the requirements of the DTA. No other power cord should be used with this set top box unless provided by your cable operator.

# QUICK START GUIDE

## Instructions

- 1** **Unpack** your Self-Installation Kit to ensure you have all needed pieces. Note your serial number \_\_\_\_\_ you will need this later during activation.
- 2** **Setup** your DTA by following the Connection diagrams.
- 3** **Activate** your DTA(s) by going online or calling your cable provider.

# Getting to Know Your Remote

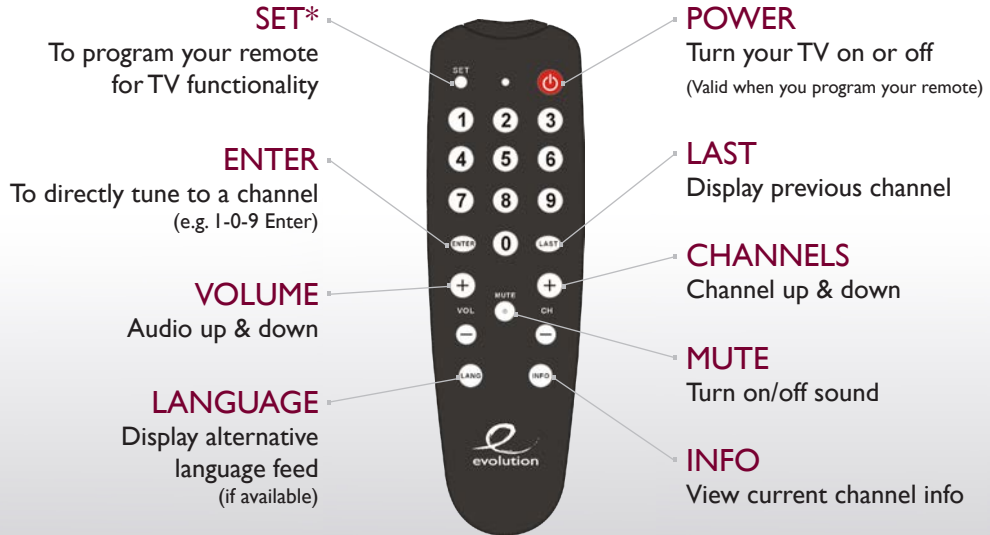


\*Please refer to the Remote Control Programming and Operating Instructions to program your remote to work on your TV.

**1** Find the coax cable that runs from the cable wall outlet to your TV. **2** Disconnect the coax cable from your TV. **3** Connect this cable to the "Cable In" port on the back of the DTA. **4** Leave the other end of this cable plugged into the cable wall outlet.

**2** Take the **coax cable** provided in your self-install kit. **2** Connect one end of the "To TV" port on your DTA and connect the other end to the "Cable In" or "RF In" port on your TV.

**3** Take the power cord provided in your self-install kit. **2** Connect the **power cord** to the electrical wall outlet and the "+5V DC In" port on the DTA.

 **4** **1** Turn on your TV and tune it to channel 3. **2** Make sure the channel "3/4" switch on the DTA is set to the same channel as your TV.  
If you don't have picture after completing the activation steps, you may need to switch your TV and DTA to channel 4.

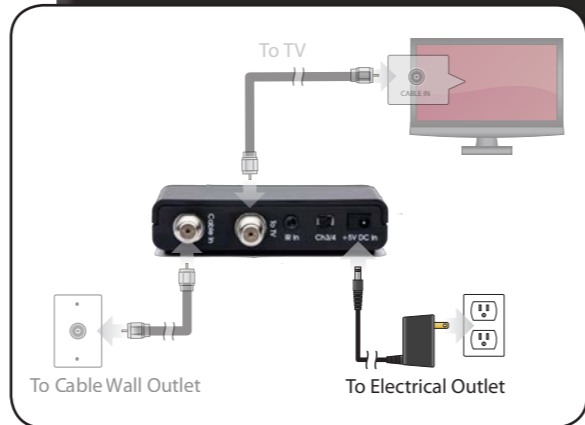

### Optional Setup

You can bypass these elective steps and go straight to activation.

 
**A** Connect the IR Extender into the IR port on the back of the DTA. Place the round end of the IR Extender Cable where your remote control can "see" it. Place the DTA out of sight by attaching the adhesive velcro strips to the back of your DTA and attach it to the back of your TV.



**B** To program your remote to control your TV's volume and power, refer to the Remote Programming Instructions.



**C** **Connect your DTA to your VCR**  
1. Follow Step 1 above. 2. Connect the coax cable from the "To TV" port on your DTA to the "Cable/RF In" port on your VCR. 3. Ensure the coax cable is connected from the output port on your VCR to the "Cable/RF In" port on your TV. 4. Follow step 3 above. Follow optional steps A and B.

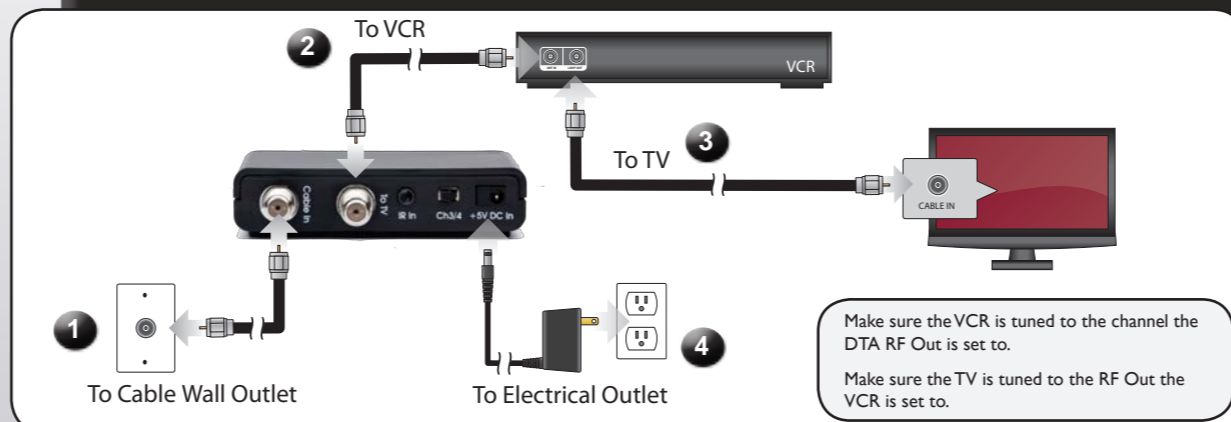

### Activating your DTA



Once you have completed setting up your DTA(s), the most important step is activating them. Activation essentially "turns on" your digital box in your home and on your cable provider's network. Once your DTA(s) are activated you will be able to begin receiving digital TV!

To begin activation, ensure you have your serial number(s) and cable account information available.

You must contact your cable operator to activate your DTA.

# Troubleshooting

## No power, the Front Panel of the DTA has No Light



- Check that the power cord is securely plugged into the electrical wall outlet and to the DTA.

## No Picture/Video

- Double check all your cable connections, including verifying that your coax cable is securely tightened onto both the cable wall outlet and the input port on your DTA. Hand tighten if necessary.
- Make sure you have activated your DTA.
- Make sure the TV and DTA are both set to the same channel (3/4 channel switch on the DTA and channel on the TV).
- Try switching the selected channel, if you had both set to 3, try setting both to 4 instead.
- If using a VCR, make sure if you have your VCR connected, your VCR is turned on and the channels all match.
- Check that the power cord is securely plugged into the electrical wall outlet and to the DTA.



## The Remote Doesn't Work



- Verify that there are no obstructions between the remote and the DTA.
- Ensure the two AAA batteries are inserted properly.
- If you are using the Remote Eye Cable (IR Extender) to place your DTA out of sight, make sure it is connected firmly to the DTA and that the round portion of the Remote Eye cable is within "sight" of the remote.

If you need additional support, please contact your cable provider.

# Troubleshooting

## No power, the Front Panel of the DTA has No Light



- Check that the power cord is securely plugged into the electrical wall outlet and to the DTA.

## No Picture/Video

- Double check all your cable connections, including verifying that your coax cable is securely tightened onto both the cable wall outlet and the input port on your DTA. Hand tighten if necessary.
- Make sure you have activated your DTA.
- Make sure the TV and DTA are both set to the same channel (3/4 channel switch on the DTA and channel on the TV).
- Try switching the selected channel, if you had both set to 3, try setting both to 4 instead.
- If using a VCR, make sure if you have your VCR connected, your VCR is turned on and the channels all match.
- Check that the power cord is securely plugged into the electrical wall outlet and to the DTA.



## The Remote Doesn't Work



- Verify that there are no obstructions between the remote and the DTA.
- Ensure the two AAA batteries are inserted properly.
- If you are using the Remote Eye Cable (IR Extender) to place your DTA out of sight, make sure it is connected firmly to the DTA and that the round portion of the Remote Eye cable is within "sight" of the remote.

If you need additional support, please contact your cable provider.